




Samsung DV300F Lens Replacement

This guide will serve as a replacement guide for the Lens.

Written By: Timothy Gordon

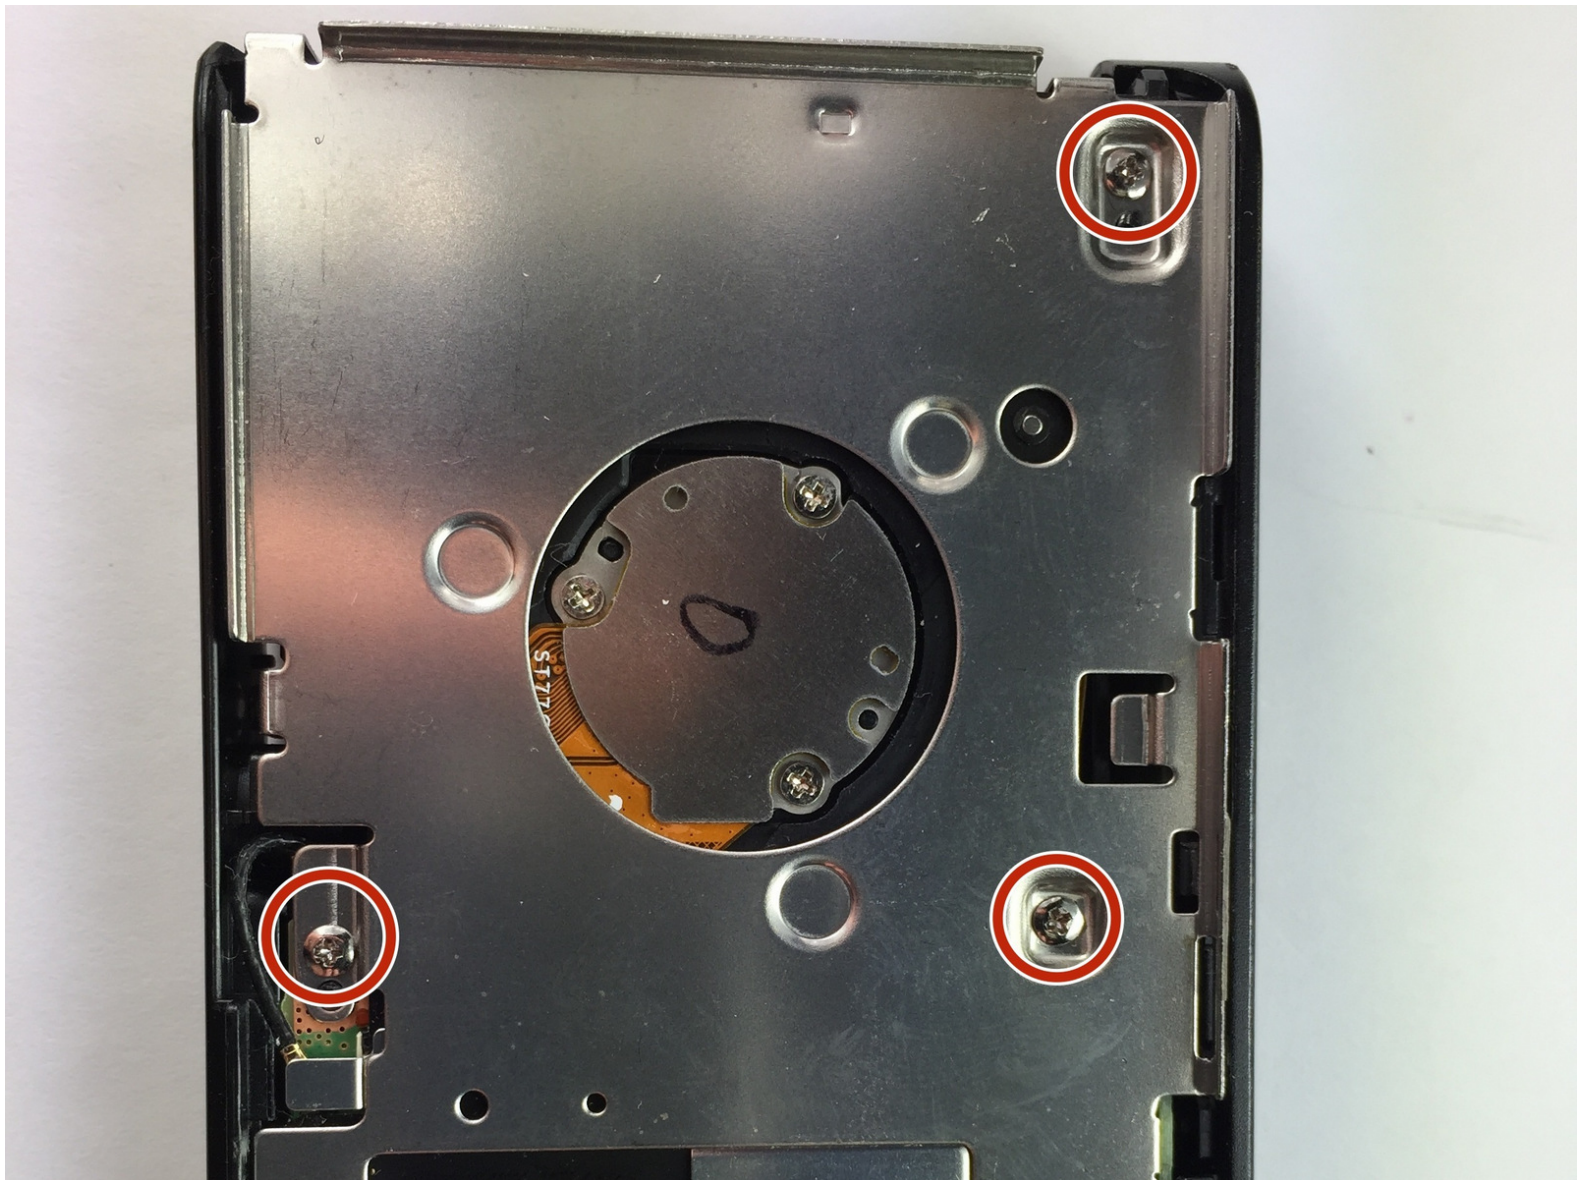

INTRODUCTION

This guide will show how to remove the camera's lens.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front and Rear Casing



- Remove the two black Phillips 4.2mm on the right side of the camera by using a #0 screw
- Remove the two black Phillips 4.2mm on the left side of the camera by using a #0 screw
- Remove the black Phillips 4.2mm on the bottom of the camera by using a #0 screw

Step 2




- Take off the back case of the camera gently

Step 3




- Take off the front case of the camera gently
- Take off the front LCD gently, so the front casing is completely free

Step 4 — Back Button Control

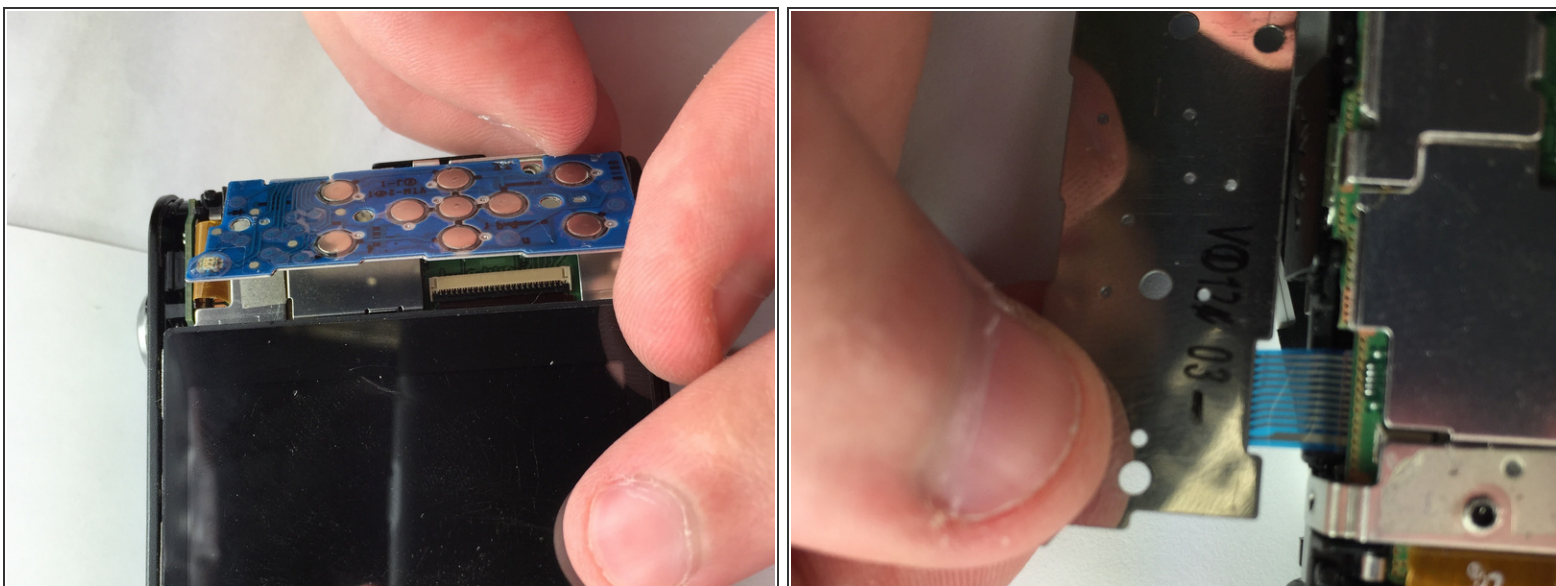



- Remove the back button control from its nesting
- Pull the tape connection to disconnect the back button control from the rest of the camera

Step 5 — Back LCD Screen

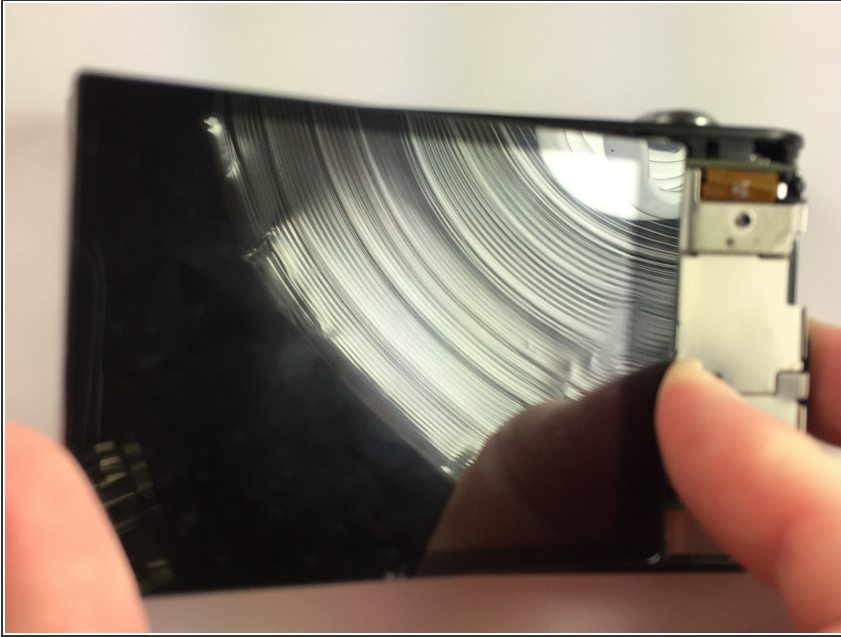



- Remove the Back LCD screen from its nest.

Step 6

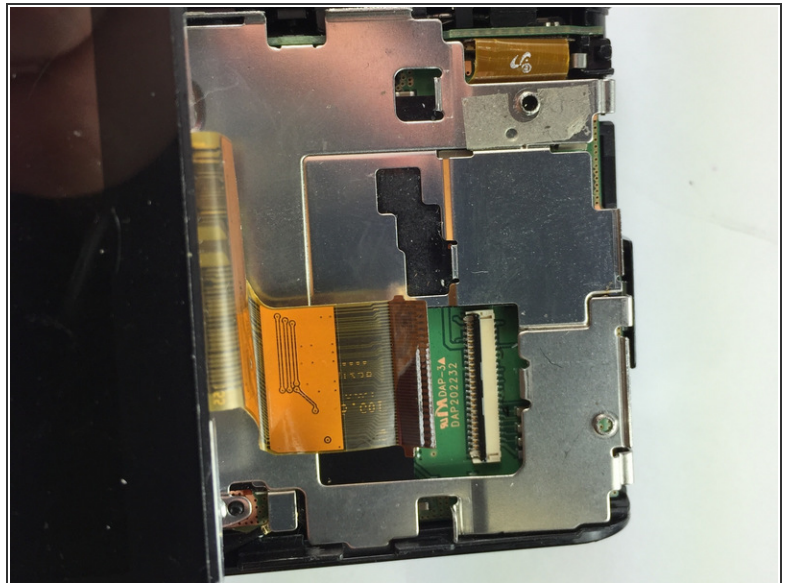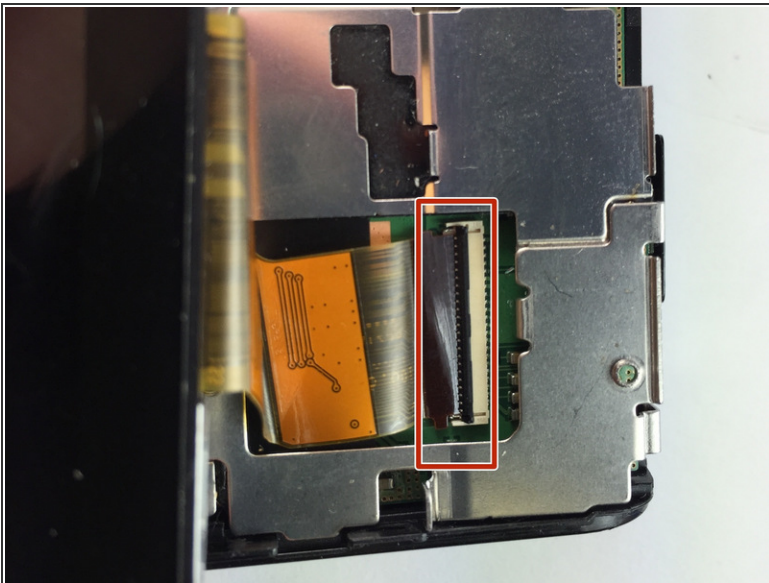



- Flip the black tab where the Back LCD screen connects to the circuit board
- Pull the tape connection to disconnect the Back LCD screen from the circuit board

Step 7 — Lens

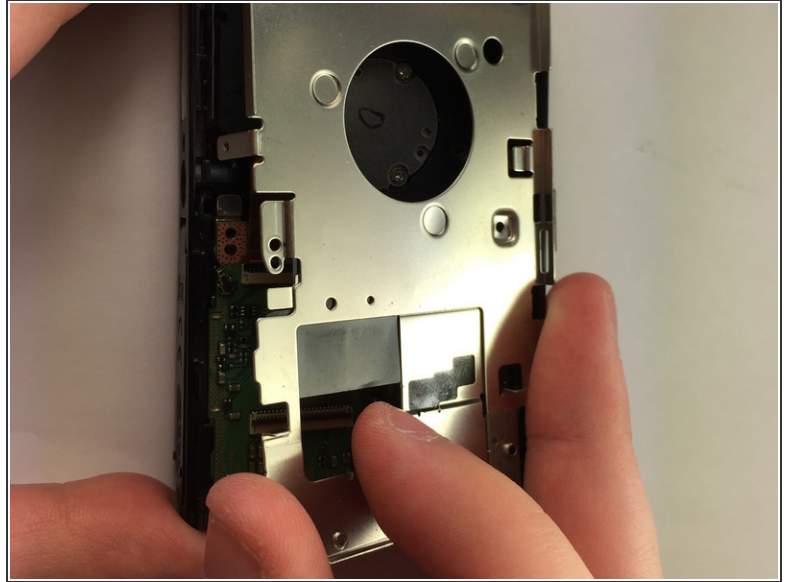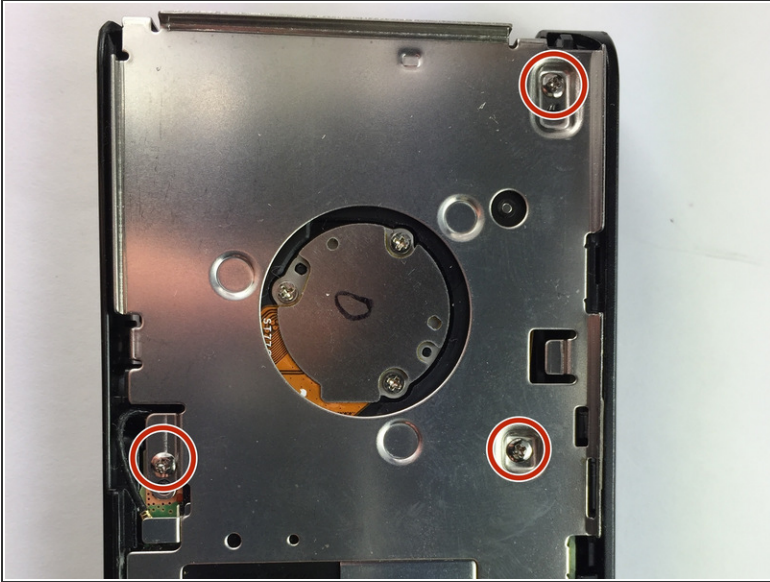

- Unscrew the 3 silver #0 Phillips 4.45mm screws from the circuit board cover
- Remove the circuit board cover

Step 8

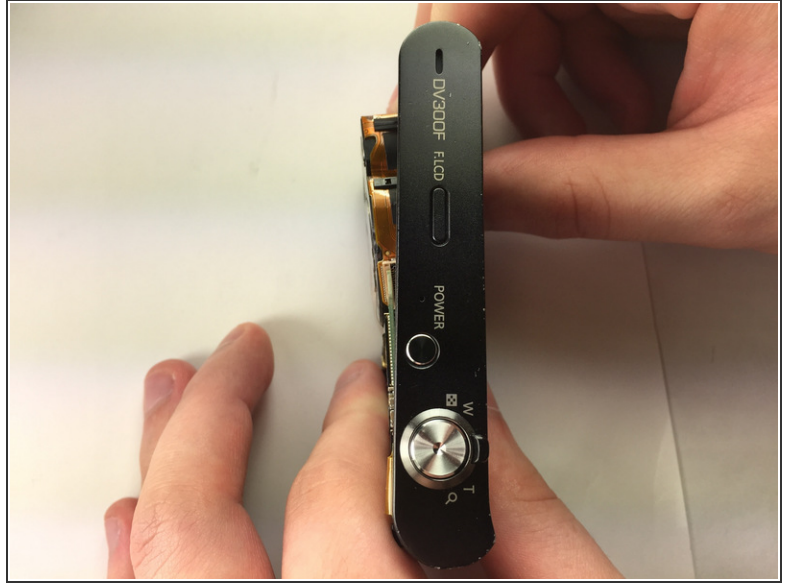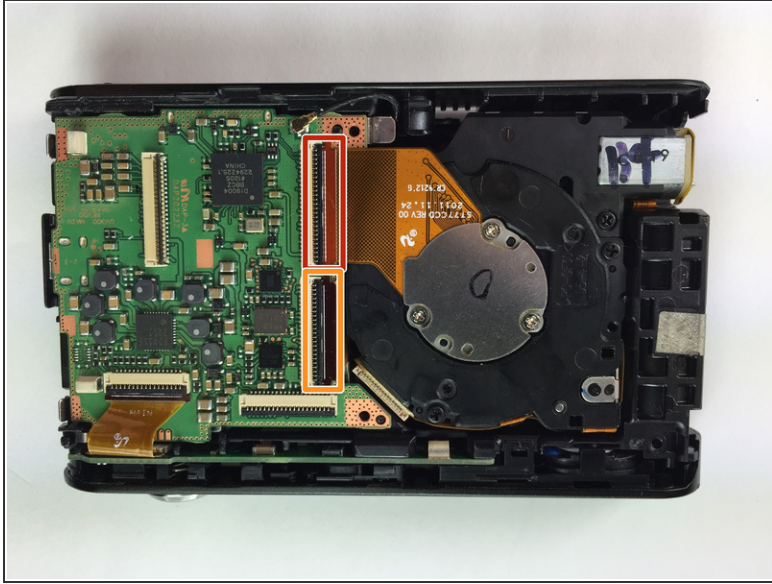

- Flip the first black tab connecting the lens to the circuit board
- Flip the second black tab connecting the lens to the circuit board
- Push the lens out from the front to remove it from the camera

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-14 05:25:27 AM.